

# INSTALLATION METHOD

Art. 115.2 - 116.2

## 03.7 INTERNAL AND EXTERNAL CORNERS IN TPO

- 1 - Make sure that the welding surfaces are clean and free from any contaminants.
- 2 - Spot weld the inside/outside corner in order to hold in the requested position.
- 3 - Weld the perimeter of the inside/outside corner to the waterproofing membrane.
- 4 - Check the executed weld with a probing tool, this operation must be carried out only after the weld has cooled completely.


**NOTE:** *The above elements should not be used as a substitute of the original waterproofing product, they have been created for a secondary protection and reinforcement of those areas of higher risk because of transversal and horizontal traction of the waterproofing membrane.*

### DESCRIPTION FOR SPECIFICATIONS


Supply and install ITALPROFILI® **inside and outside corners** or similar, made of UV stabilized TPO.



^ ART. 115.2

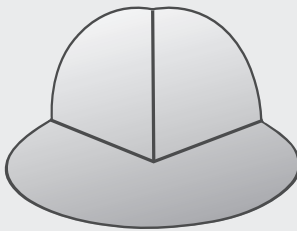

^ ART. 116.2

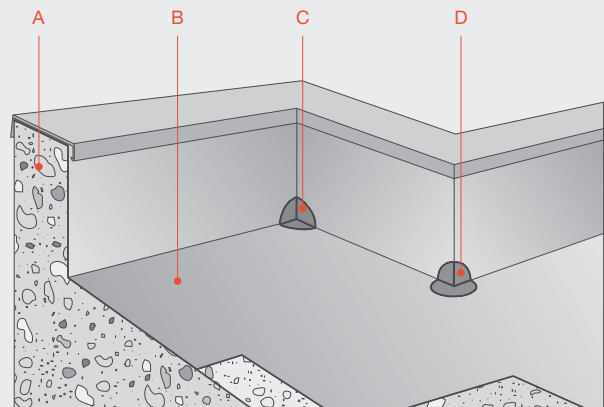

- A - Deck
- B - Bituminous membrane
- C - Internal corner
- D - External corner